


Installation of 200 SERIES 4 Inch Glazing Base Channel

- 1) Install 4 Inch Glazing Base Channel (Install after vertical Glazing Channel and before the Door Frame Mullion has been installed.) *USE OF SECURE FLOOR ANCHORS ("Red Head's", Lag Bolts, etc.) WILL BE REQUIRED AND MUST BE SUPPLIED BY OTHERS.*
 - a. Note that the Glazing Base Channel has one long leg and one short leg. See Cross Section AF.
 - b. Position one end of the Glazing Base Channel, so that the short leg will be under the removable stop (Snap-in Glazing Base) portion of the Glazing Base when complete, tight and flush with the vertical Glazing Channel as shown in Joint Detail 36.
 - c. Align / plumb the Glazing Base Channel with the door frame Jamb, and secure the Glazing Base Channel to the floor.
 - d. Measure for height (from the bottom of the H Section to the top of the short leg of the Glazing Base Channel and cut the Sidelight Glazing component of the Door Frame Mullion.
 - e. Assemble and install the Door Frame Mullion per the Sidelight directions.
 - f. Slide the Door Frame Mullion Jamb component over the end of the Glazing Base Channel as shown in Joint Detail 35.
 - g. Check the Door Frame Mullion for plumb (Vertical Level), adjust and secure to the Glazing Base Channel.

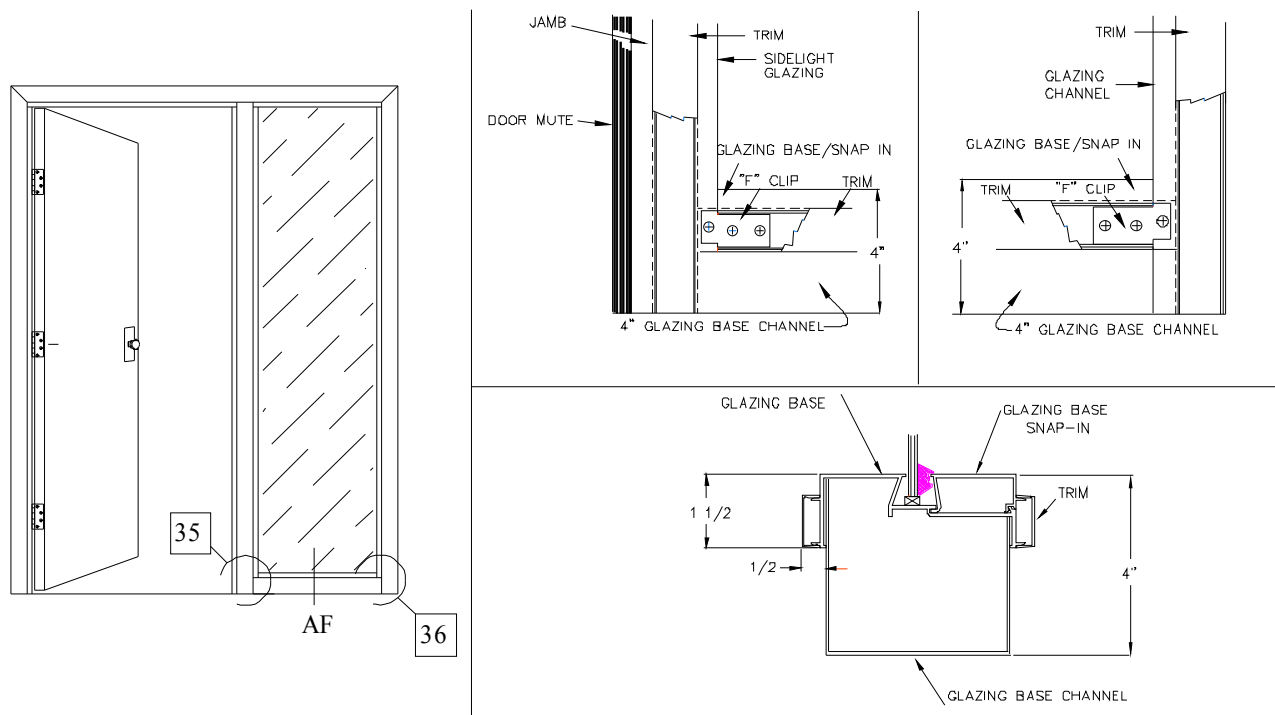

- h. Return to the Installation Instructions for the sidelight.